
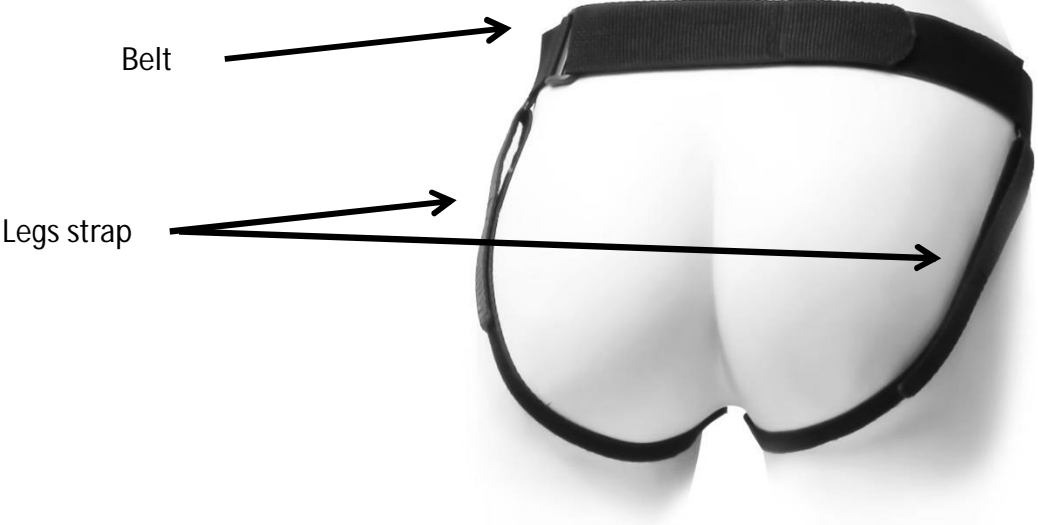
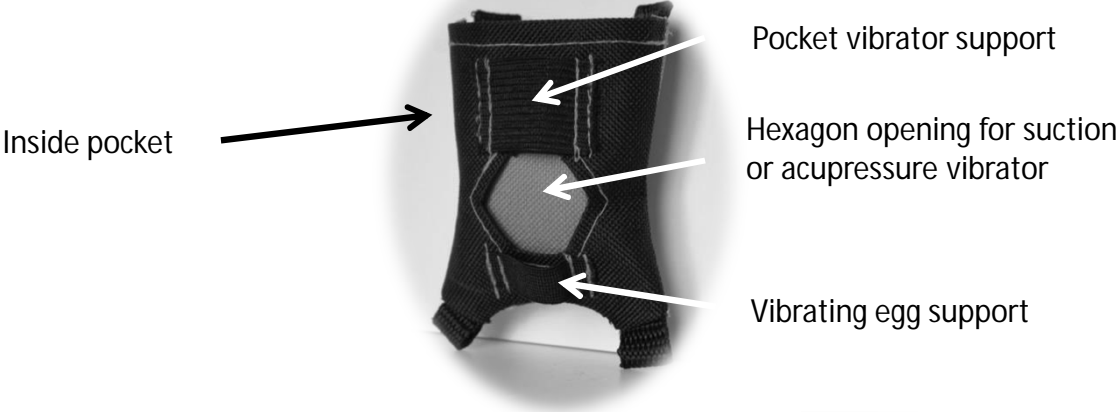


Diagram

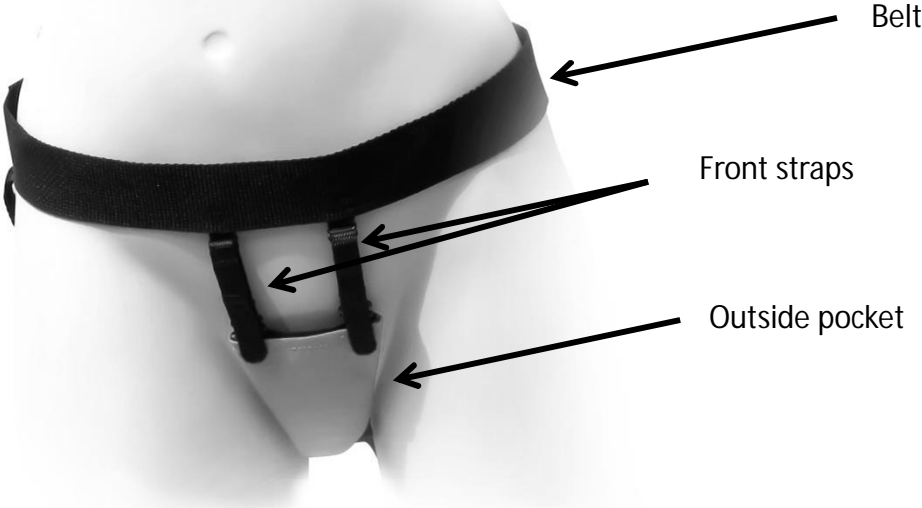

Instruction for use:

To ensure product satisfaction, it's important to familiarize yourself with the product and try it out on your own before using it with your partner.

## Harness

This harness has been designed to support your vibrator without the need to handle it with your hands. The pouch has been designed to be compatible with a wide range of vibrators on the market.

Instructions for use:

To maximize your experience with our harness, please follow these instructions:

Step 1: Insert your vibrator into the space designed for it.

For the vibrating egg: insert it into the bottom elastic band on the pouch.

For the pocket vibrator: insert it into the top and/or bottom elastic band on the pouch, depending on the size your vibrator.

For suction or acupressure vibrators: insert inside the pouch, taking care to pass the nozzle through the hexagon opening.



Step 2: Put on the harness and position the belt just above your hips. Adjust it to your waist.

Step 3: Adjust the front straps.

These straps are used to adjust the length between your belt size and your clitoris depending on the type of vibrator you're using. For pocket and suction/acupressure vibrators, make sure that the hexagon faces your clitoris and that the arch of the pocket is above the vaginal entrance. For vibrating eggs, the pocket should be positioned a little higher.

Step 4: Place yourself in your preferred sexual position and adjust the thigh straps. To ensure the right fit, we recommend activating the vibrator for successful adjustment in this step. Once you've found the right position, you're ready to try it out.

Note that you may need to readjust the thigh straps if you change your sexual position. To maximize your adjustment, it's best to do this while standing on your knees.

Care: Machine wash in cold water on gentle cycle. Air dry. Clean before and after every use.

Warning: Prolonged use of a vibrator may cause irritation or injury to the clitoris. Avoid excessive use.

Warning: Prolonged use of a vibrator could overheat and damage it. If you feel abnormal heat, please switch it off and let it cool down.

Warning: Please remove the vibrator from the pouch before putting the harness in the washing machine.